

# Fire Alarm Panel IRIS/IRIS light - Short User Manual for Zone Test and Disable

## Zone TEST

**TEST Indication**

- GENERAL FIRE
- PRE ALARM
- GENERAL FAULT
- SYSTEM FAULT
- SYSTEM SILENCE
- DELAY
- DISABLE
- TEST
- POWER ON

**Menu for viewing the zones in test**

**Messages for the zones in test**

### Button sequence for ZONE testing:

1 Access 1 \*\*\*\* OK System Maintenance

Code for ACCESS LEVELS 2 and 3

2 Test Zone Test

3

Select the zones for testing. To test all 96 zones press the "Select all" button.

4 Test EXIT Go to the zones in test and activate the installed detectors to check the system for proper work and efficiency. 5

### Button sequence to exit the ZONE testing:

5 MENU System Maintenance Test Zone Test Stop

### For technical support help:

Tel.: .....; Mobile: .....

## DISABLE Introducing

**Indication for introduced DISABLE**

- GENERAL FIRE
- PRE ALARM
- GENERAL FAULT
- SYSTEM FAULT
- SYSTEM SILENCE
- DELAY
- DISABLE
- TEST
- POWER ON

**Menu for viewing the introduced disables**

**Messages for disabled zones, outputs and devices.**

### Button sequence for DISABLE introducing:

1 Access 1 \*\*\*\* OK System Maintenance

Code for ACCESS LEVELS 2 and 3

### Button sequence for ZONE DISABLE:

2 Disable Zones Zone Number 1

Select the zone for disabling

3 Zone Status Enabled Disabled Apply The zone is disabled

### Button sequence for OUTPUTS DISABLE:

2 Disable Outputs Choose an output to disable: Sounder; Fire Brigade; Fire Protection; Fault Routing.

3 Enabled Disabled Apply The output is disabled

You can disable several outputs at the same time

### Button sequence for LOOP DEVICES DISABLE:

2 Disable Loop Devices Name of the device Select the device type from the list

3 Enabled Disabled Apply The loop device is disabled

### Enabling of ZONES, OUTPUTS and LOOP DEVICES:

1 2 3 Disabled Enabled Apply The Zone / Output / Loop Device is enabled